

01:15

Electron cooler is broken during stacking

01:33

Please - Michel is our Electron Cooler Hero !  
 Electron cooler works again & we could do it in STORAGE TIME

GECEBG1E → Reset, → On


GECEBG8T → Reset, → On

GECEBG2T → Reset, → On

01:45

Auxiliary operators switched on a new 208 Pb electrode.


- \* what to do if Electron cooler is Broken
  - 1) In case of Electron cooler broken, GECEBG1E, GECEBG2T or / and GECEBG8T looks RED as shown in figure 1.
  - 2) If the Long Storage Measurement is going on & we are on Step Manipulation 9, we can get them working
  - 3) a) First click on GECEBG1E, then RESET it & then click on ON button

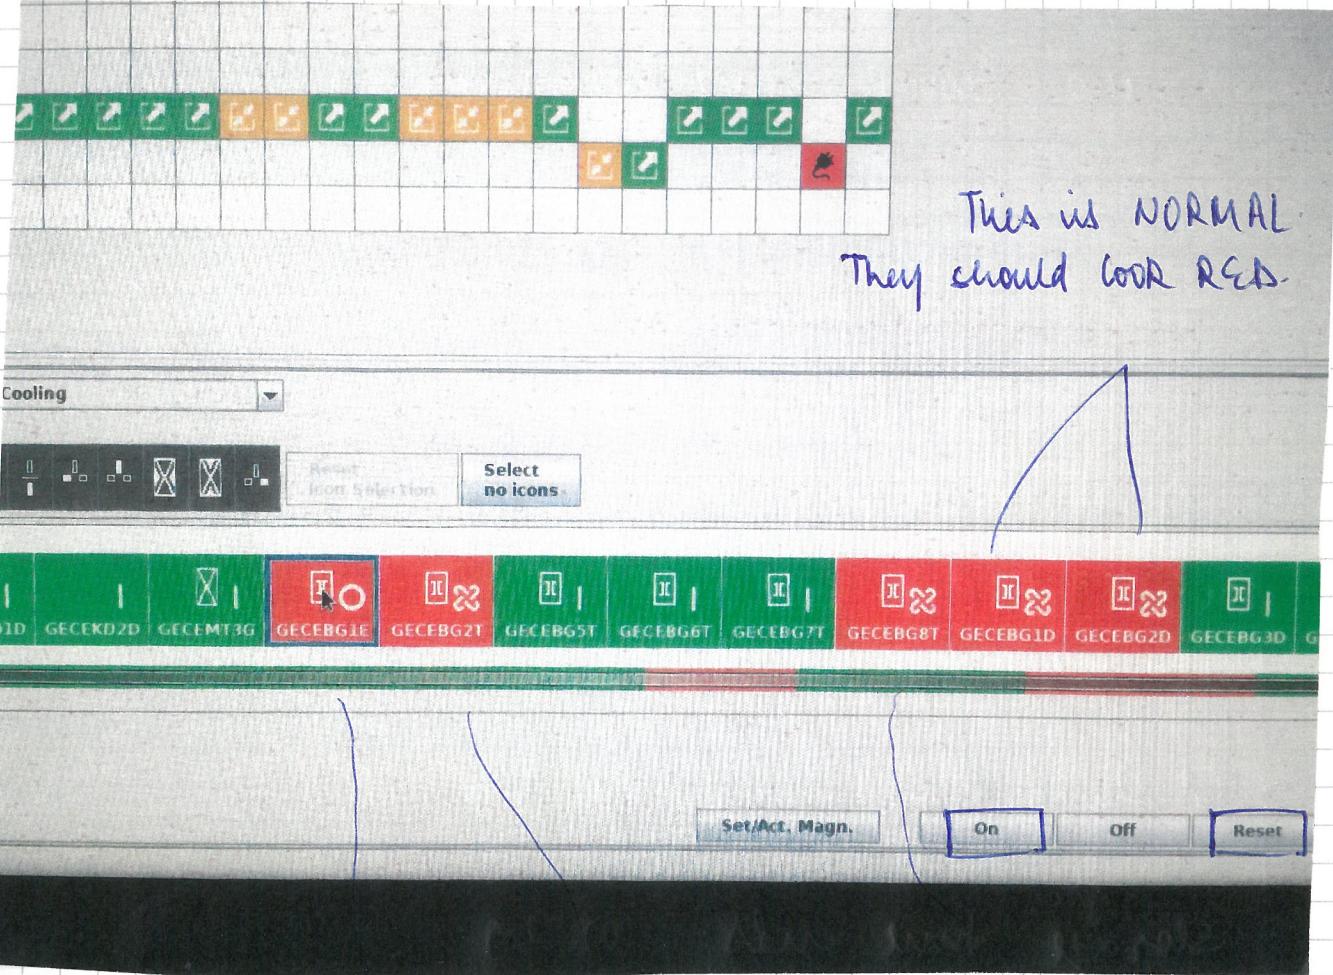

Aj 1) GECEBG1E, GECEBG2T & GECEBG8T are RED which means, electron cooler is BROKEN

b) Second click on GECEBG8T, then click on RESET button (on right bottom) & then click on ON button

c) Third click on GECEBG2T, then click on RESET button (on right bottom) & then click on ON button.

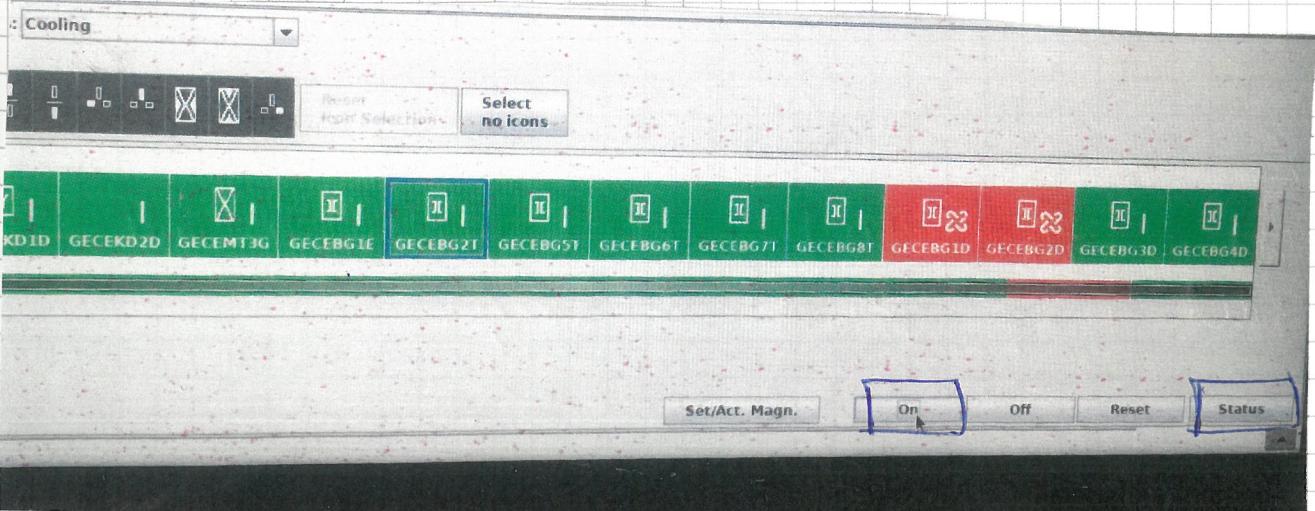

A) Now, these must all green & electron cooler works!)